

Installation Notes for Power Supply


1. DC Cables will pass through the wall (one inch diameter hole) approximately 6-12 inches above the floor, on the LEFT SIDE OF THE SEAT, CENTERLINE, AS YOU FACE THE TOILET SEAT. Your cable should extend out from the wall 12 inches. Your wall plate must be NO MORE THAN 6 INCHES to the left of the commode.
2. Our seat cable is 24 inches long; we provide connection point to power cable accordingly.
3. DC OUTPUT CABLES are to be sized according to the diagram supplied. DO NOT USE BELL WIRE. USE ONLY 16 OR 14 GAUGE STRANDED WIRE. Use BLACK WIRE for POSITIVE and WHITE WIRE for NEGATIVE.
4. If installing one (1) power supply for two (2) washrooms and/or multiple seats, center the power supply between the locations.
5. NO LOOPING OF WIRES. Each seat wired directly back to DC Side of power supply. IF WIRES ARE LOOPED, BELLA BAGNO, INC. WILL NOT INSTALL THE HYGOLET SEATS. YOU WILL BE CHARGED ACCORDINGLY FOR OUR INSTALLERS TO RETURN WHEN THE POWER SUPPLY INSTALLATION IS PROPERLY COMPLETED.
6. USE CRIMP LUGS FOR CABLE CONNECTION ON DC OUTPUT TERMINALS OF POWER SUPPLY.
7. On power supplies with multiple output connections, distribute power cable connections equally between output "+" and "-" PAIRS.
8. Power supply 110 volt AC leads: BLACK is Hot, WHITE is Neutral; conduit is to be used on the AC side of power supply (it is not necessary to use conduit on the DC side of power supply); connect to UNSWITCHED power source.
9. Please call 847-673-Seat (847-673-7328) for any additional questions concerning installation.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT INTERCONNECT OUTPUT TERMINATIONS

Hole in the wall to be 1 inch in diameter.


Seat cable will pass through a 5/16 inch hole, drilled through the center of a STAINLESS STEEL wall plate, measuring 2-3/4" by 4-1/2". Wall plate should be anchored to the wall using two (2) #10 plastic anchors and two (2) #12 Phillips head sheet metal screws.

This should be furnished by your electrician.

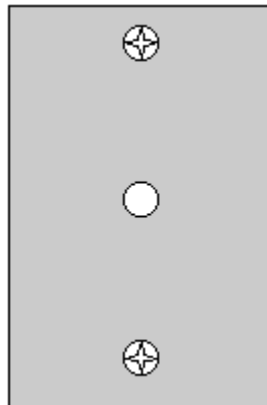

BELLA BAGNO INC. – HYGOLET POWER SUPPLY – WIRE DIAGRAM

14 or 16 AWG STRANDED ONLY

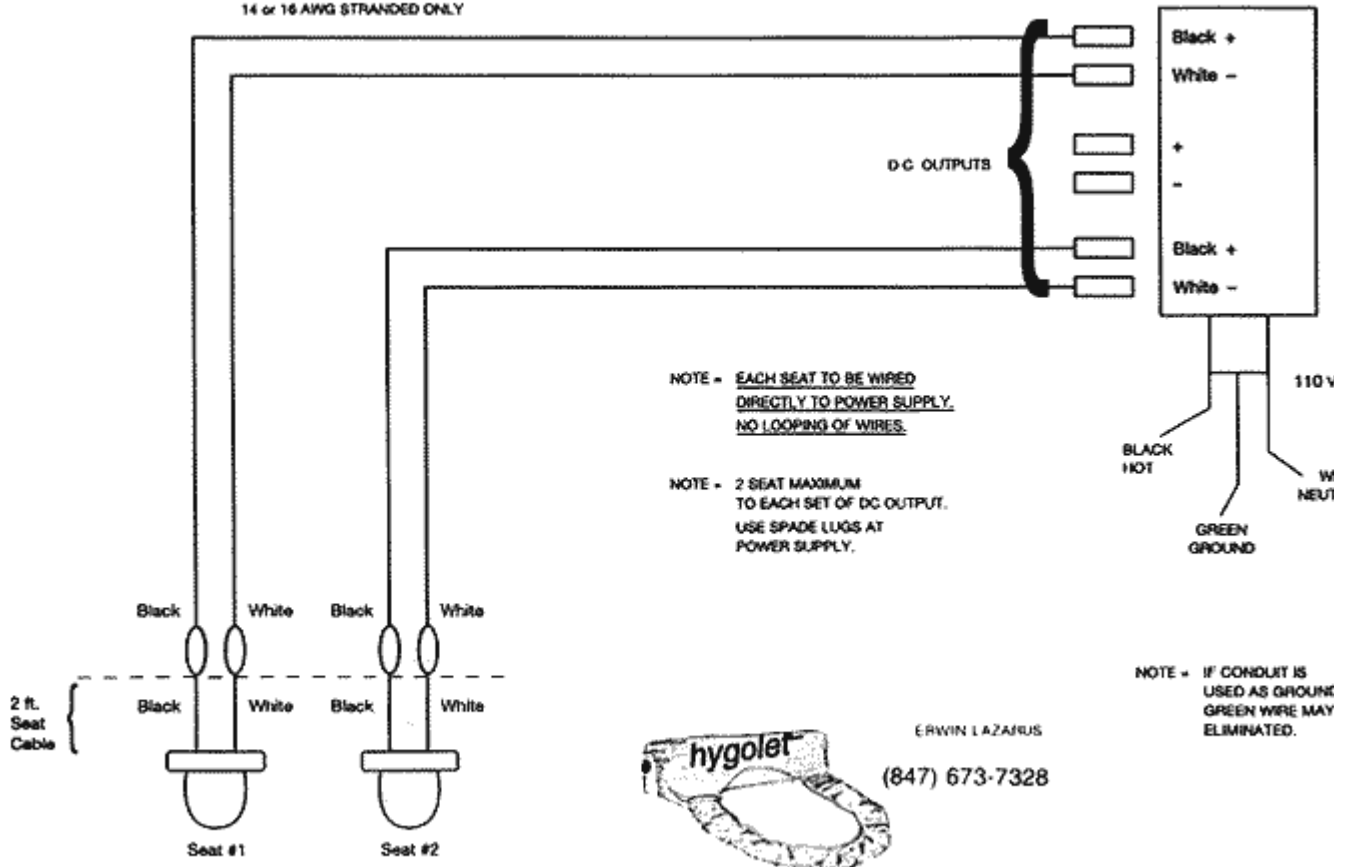

NOTE - EACH SEAT TO BE WIRED
DIRECTLY TO POWER SUPPLY.
NO LOOPING OF WIRES.

NOTE - 2 SEAT MAXIMUM
TO EACH SET OF DC OUTPUT.
USE SPADE LUGS AT
POWER SUPPLY.

NOTE - IF CONDUIT IS
USED AS GROUND
GREEN WIRE MAY
ELIMINATED.



ERWIN LAZARUS
(847) 673-7328

Bella Bagno Inc.
5500 W. TOUHY AVE., UNIT E, SKOKIE, ILLINOIS 60077